

Instructions and Care Manual for Silicone Kitchen Accessories

For Products:

- Silicone Turner/Spatula
- Silicone Tongs
- Silicone Spoon
- Silicone Ladle
- Silicone Trivet

General Information

Thank you for choosing our silicone kitchen tools. These products are designed for a safe and convenient cooking experience. Please read this manual carefully before use.

To ensure long-lasting use of our high-quality silicone tools, please consider the following:

- Before the first use, remove all packaging materials completely.
 - **Caution:** Using the product with packaging parts may cause a fire hazard.
- Thoroughly clean the product before first use and dry it well.
 - **Caution:** Do not use the product uncleaned to avoid contamination from residues.

Usage and Safety Instructions

- **Heat Resistance:** up to **260°C** (500°F).
- **Safe Materials:** Made from food-grade, BPA-free silicone.
- **Dishwasher-Safe:** Suitable for cleaning in the dishwasher.

1. Safety Instructions / Hazard Warnings:

- **Observe Heat Resistance:**
Use the kitchen tools only within the specified temperature limit. Temperatures above 260°C (500°F) can damage the material or release hazardous fumes.
- **Do Not Expose to Direct Fire:**
Silicone is heat-resistant but not flameproof. Avoid direct contact with open flames or heating coils.
- **Avoid Sharp Objects:**
Sharp blades or other pointed objects can damage the silicone surface and impair functionality.
- **Do Not Use Aggressive Chemicals:**
Do not clean the kitchen tools with abrasive or aggressive cleaning agents, as these can harm the material.
- **Avoid Prolonged Heat Exposure:**
Do not leave the kitchen tools in hot pans or pots for extended periods to prevent warping or melting.

2. Precautions:

- Thoroughly clean the kitchen tools before first use (see above).
- Ensure that children do not use the kitchen tools unsupervised.

3. Instructions for Use:

- **Usage:**
 - The turner/spatula is ideal for flipping and serving food.
 - The tongs are perfect for gripping and turning hot items.
 - The spoon is suitable for stirring and portioning.
 - The ladle is designed for scooping soups, sauces, or stews.

- The trivet protects surfaces from hot pots and pans.
- **Cleaning:**
 - Wash the kitchen tools with warm water and mild dish soap before first use.
 - Dishwasher-safe: Place the tools on the top rack of the dishwasher.
 - Dry the kitchen tools after cleaning to prevent water spots.
- **Storage:**
 - Store the tools in a dry, cool place, away from direct sunlight.
 - Avoid cramped storage spaces where the tools could become deformed.

4. Care Instructions:

- Regular cleaning extends the lifespan of the kitchen tools.
- Stains from oily or highly pigmented foods may occur but often fade after repeated use and cleaning.
- For stubborn stains, soak the kitchen tools in warm water with a little baking soda.

5. Disposal:

The silicone kitchen tools are recyclable. Dispose of them according to local recycling guidelines.

6. Warranty:

This product is covered by a warranty against material and manufacturing defects. Damage caused by improper use is not covered. For warranty claims, please contact the retailer.

Manufacturer:

AMT Alumentall-Gießtechnik GmbH, Glörstr. 20-22, D - 58579 Schalksmühle / Germany.

www.bestpan.com / info@gastroguss.de / Tel. + 49 23 55 50 83 - 0.

Responsible Person with reference to the General Product Safety Regulation (GPSR):

AMT Alumentall-Gießtechnik GmbH, GF Harald Möhl, Glörstr. 20-22, D - 58579 Schalksmühle / Germany.

www.bestpan.com / info@gastroguss.de / Tel. + 49 23 55 50 83 - 0.